



CAMLOCK

ASSEMBLY & INSTALLATION




Attach spigot to base plate.
Insert hex key rotate until **CAMLOCK** engages

Remove key & store in safe place.



CONCRETE SLAB SHOULD BE MINIMUM 3" THICK

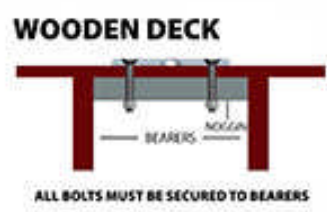

ALL BOLTS MUST BE SECURED TO BEARERS


Camlock Surface Umbrella Base.

- 9 Lbs.
- 18" High
- 1 1/2" Stem.
- Accomodates 1 1/2" diameter umbrella pole.
- Dual locking screws.
- Used for concrete and deck installation.

Item #: FF CMLK-SM


CAMLOCK

ASSEMBLY & INSTALLATION

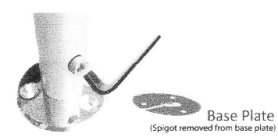


Attach spigot to balate
Insert hex key rotate until **CAMLOCK** engages

Remove key and store in safe place.

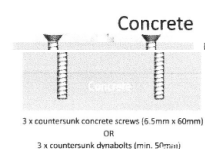

Concrete Slab should be minimum 3" thick

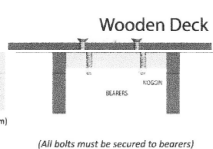


(All bolts must be secured to bearers)



CAMLOCK

ASSEMBLY & INSTALLATION

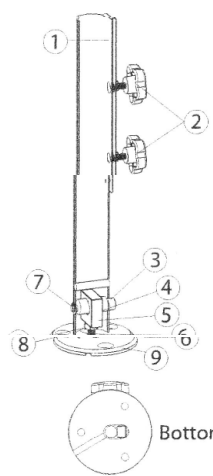

1. Spigot Pipe
2. Umbrella Locking Screws
3. Cam Bolt
4. Cam Barrel
5. Cam Block
6. Cam Screw
7. Circle Clip
8. Cam Screw Locking Nut
9. Base Plate



National Outdoor Furniture
1210 W. Main Street #296
Riverhead, N.Y. 11901

PHONE (888) 663-4621
E-MAIL nofinc1@gmail.com
www.nationaloutdoorfurniture.com